




Order Cam Installation Guide

1.

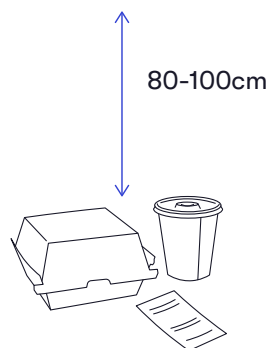


Position

Mount **80–100cm** above the surface where receipts/orders will go.

Place the button within easy reach – avoid reaching across the camera.

▲ If it can't be mounted to a wall, ensure surface is rigid to prevent vibration when button is pressed

2.

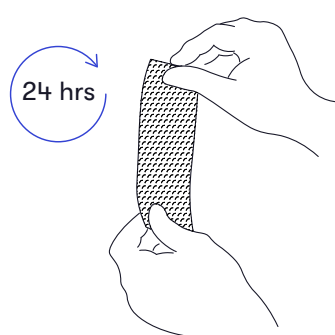


Prepare

Clean the wall with the provided alcohol wipes.

Once dry, stick the Velcro to the wall where you'll position the camera and button.

▲ Let Velcro cure for 24 hours before mounting.


3.

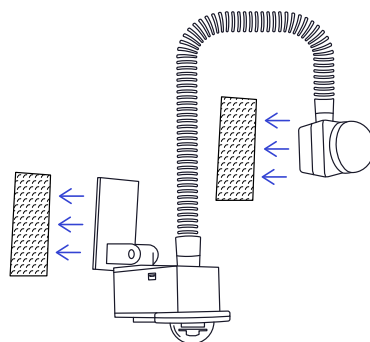

Mount


After 24 hours, attach the camera and button using the Velcro.

4.

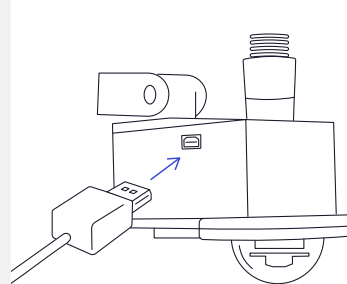

Power


Connect the camera to power using the power supply provided.

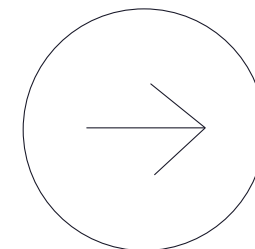

Turn over for **wired** or **Wi-Fi** internet connection.

Wired

5a.

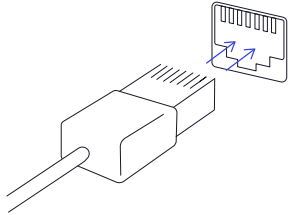


Wired internet

Plug a wired Ethernet cable into the port on the back of the camera.

Wi-Fi

5a.

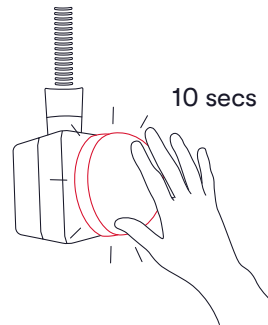

Wi-Fi set up

To enter Wi-Fi set up mode, press and hold the red button for at least 10 seconds.

5b.



Choose network

On a laptop or mobile device, select the new Wi-Fi network that appears after 20 seconds.

It will be named **Order Cam Setup (abc123)**, the characters in brackets will match the sticker on the Order Cam.

5c.

WiFi Setup

Network:

Password:

Save


Enter password

In a web browser, go to <http://192.168.4.1>

Select your chosen WiFi network and enter the password, then **Save**.

Your device will automatically disconnect from the Order Cam network.


6.

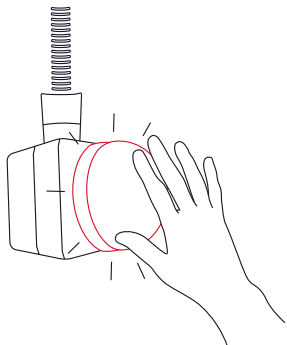

Test

After 2 minutes, position a receipt under the camera and press the red button.

7.

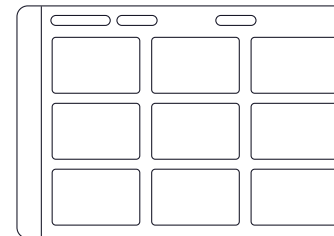

View

Go to ordercam.videoloft.com and log in to view the photo.