Cloud Adapter Enterprise Set Up Guide



- 1. Obtaining Cloud ID
- 1.1 Option 1: By IP address using web browser
- 1.2 Option 2: By monitor connected via HDMI
- 2. Setting bespoke network settings (optional)
- 3. Connecting your security system to your Cloud Adapter Enterprise



1. Obtaining Cloud ID


1.1 Option 1: By IP address using web browser

Obtain the IP address of the Cloud Adapter Enterprise from your router or switch. The device name will start with 'cloudadapter'.



Ensure the machine you are using to access a web browser is on the same network as the Cloud Adapter Enterprise.

Enter the IP address in the browser to reveal a webpage which shows the Cloud ID.

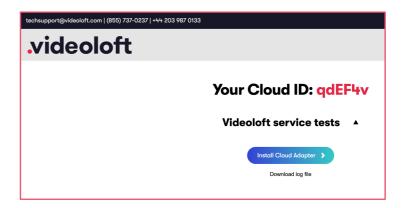


1.2 Option 2: By monitor connected via HDMI

Connect a monitor and keyboard to the Cloud Adapter Enterprise.

You'll be prompted for a default password, enter 'cloud'.

You'll then be prompted to change the password. Please set a secure password and record it in a password manager tool.

Find the text file on the desktop, the Cloud ID will be the file name.

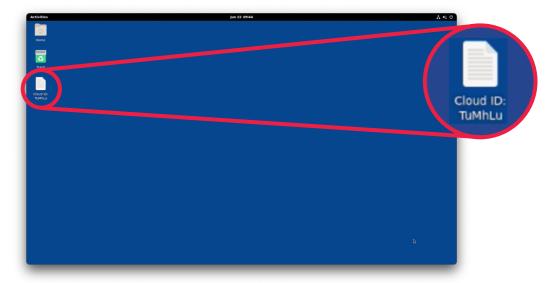




2. Setting bespoke network settings (optional)

Connect a monitor and keyboard to the Cloud Adapter Enterprise.

Go to Activities > Applications > Settings > Network Interfaces.


Select the settings cog for the NIC you want to alter.

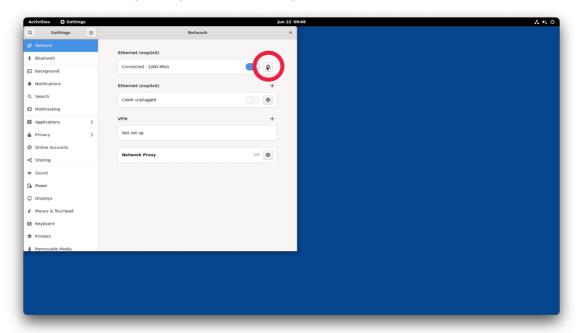

Here you can set the following:

- IPv4 address
- Subnet mask
- Gateway address
- DNS servers


Click 'Apply'.

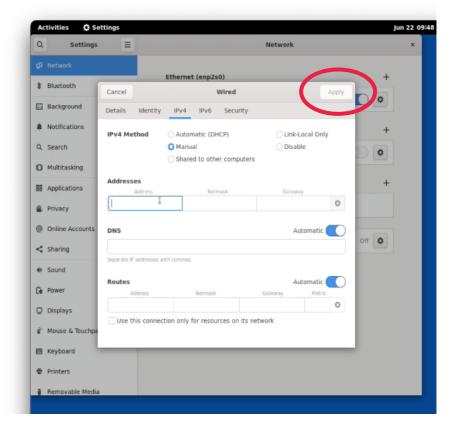



Once set, un-toggle the NIC and re-toggle to force the changes to be

applied.

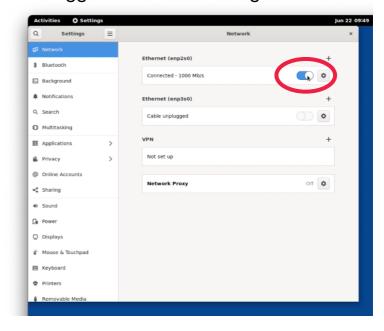

3. Connecting your security system to your Cloud Adapter Enterprise

Required steps vary depending on the brand of cameras or NVR/DVR you are connecting to Videoloft. Brand specific installation guides can be found here.

